

for Large-sized Vehicles Side Slip Tester

SIDESLIP TESTER

MODEL **ST Series**

Side Slip Tester for a Wide Range of Applications from Light to Large-sized Vehicles

Measures the side slip when driving straight and determines whether the front wheel alignment is good or bad. Drive a vehicle straight at a slow speed and read the maximum indicated value of the meter while the tire passes over the footboard. The measuring range is so wide (with 15 scale marks) that a wide range of vehicles, including imported ones, can be measured.

ST-5100E

- The flat shape of the tester enables effective use of space.
- The box-like shape makes installation easy.




ST-2015A

5000Kg

- FF and FR axle slip of the front two axles* also can be measured. * Refers to a side slip occurring between the front two axles (FF and FR axles).
- The installation width of the left and right footboards can be selected to suit the needs of the customer.



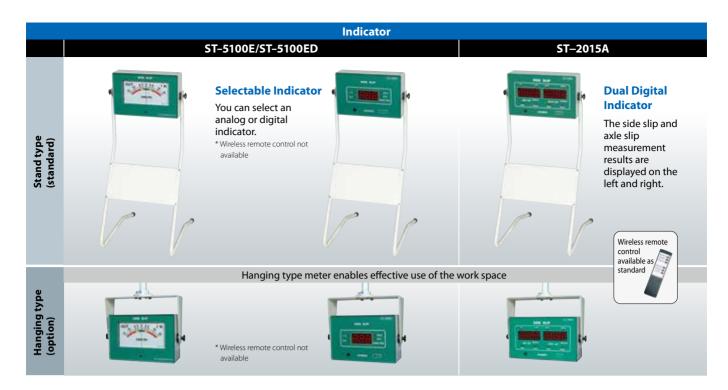

■ Specifications

Model		ST-5100E		ST-2015A
MLIT registered model		ST–5100E (analog)	ST–5100ED (digital)	ST-2015A
Model test number		JATA-A-2	JATA-A-2 (class D)	JASEA-A-33
Allowable axle load (kg)		10,000		
Measure-	Side slip (m/km)	IN15.0 to 0.0 to OUT15.0		
ment range	Axle slip (m/km)	-		-40 to 0 to +40*1
Footboard	Outer width × inner width (mm)	2,730×730		2,950×950 (for light vehicles)/3,000×1,000/3,100×1,100
	Center distance (mm)	1,730		1,950 (for light vehicles)/2,000/2,100
	Dimensions (mm)	W500×L1,000		
Power supply (V/A)		AC100/3		AC100/5
Tester dimensions (mm)		W610xL2,860xD140		W660×L1,415×D156×2 sets/vehicle
Tester weight (kg)		Approx. 310		Approx. 400
Installation area (mm)		Approx. 3,000×700		Min3,750×760 (for light vehicles)/Max3,900×760
Indica	tion method	Analog moving coil type	LED digital indication	
Deter	mination function	Buzzer "BAD" lamp		p/buzzer
Hold f	function	– Peak hold type (timer		r auto cancellation)
Hold f Warni	ng position (mm/m)	IN, OUT 5.1 or more	IN, OUT 5.1 or more	
	tor dimensions (mm)	W410×D150×H275	W410×D100×H275	W460×D100×H275
Moun	ting method	Stand type/hanging type*2		

*1: LEFT is displayed when the axle slip value is negative (-), and RIGHT is displayed when the axle slip value is positive (+).

*2: The hanging type is an option.

Before using this product, carefully read the precautions indicated by ADANGER, WARNING, and ACAUTION in the manual supplied with this product to ensure correct use.



 ANZEN 4-16-25 Shibaura, Minato-ku, Tokyo 108-0023
Phone: +81 3-5441-3412 Fax: +81 3-5441-8848
ANZEN website: http://www.anzen.co.jp

CD:01205121
CD:01205103
CD:01205122
CD:01205106
CD:01201223
CD:01201224